

| Code | Description | kvar | Stock | Suplement 1 | Suplement 2 | Suplement 3 |
|----------------|------------------------|------------|-------|----------------------|----------------------|---------------------------------------|
| R3Q641EN00000 | OPTIM 1-5-440; | 5 kvar | 2 | Standard | Standard | Standard |
| R3J0050000K00 | OPTIM 3-5-230; | 5 kvar | 1 | Standard | Standard | Automatic switch 63 A + Earth leakage |
| R3Q651EN00000 | OPTIM 1-6,25-440; | 6,25 kvar | 2 | Standard | Standard | Standard |
| R3Q761EN00000 | OPTIM 2-7,5-440; | 7,5 kvar | 6 | Standard | Standard | Standard |
| R3J105. | OPTIM 3-7,5-440; | 7,5 kvar | 3 | Standard | Standard | Standard |
| R3Q671EN00000 | OPTIM 1-10-440; | 10 kvar | 4 | Standard | Standard | Standard |
| R3L110. | OPTIM 3 P&P-12,5-440; | 12,5 kvar | 25 | Standard | Standard | Standard |
| R3Q781EN00000 | OPTIM 2-12,5-440; | 12,5 kvar | 4 | Standard | Standard | Standard |
| R3L1100000K00 | OPTIM 3 P&P-12,5-440; | 12,5 kvar | 3 | Standard | Standard | Automatic switch 63 A + Earth leakage |
| R3L1100010K00 | OPTIM 3 P&P-12,5-440; | 12,5 kvar | 3 | Autotransf. maniobra | Standard | Automatic switch 63 A + Earth leakage |
| R3L1A2. | OPTIM 3 P&P-12,5-230; | 12,5 kvar | 3 | Standard | Standard | Standard |
| R3L1A20000K00 | OPTIM 3 P&P-12,5-230; | 12,5 kvar | 3 | Standard | Standard | Automatic switch 63 A + Earth leakage |
| R3Q681EN00000 | OPTIM 1-12,5-440; | 12,5 kvar | 3 | Standard | Standard | Standard |
| R3J110EN000K00 | OPTIM 3-12,5-440; | 12,5 kvar | 1 | Standard | Standard | Automatic switch 63 A + Earth leakage |
| R3Q691EN00000 | OPTIM 1-15-440; | 15 kvar | 10 | Standard | Standard | Standard |
| R3L120. | OPTIM 3 P&P-17,5-440; | 17,5 kvar | 13 | Standard | Standard | Standard |
| R3L1200000K00 | OPTIM 3 P&P-17,5-440; | 17,5 kvar | 4 | Standard | Standard | Automatic switch 63 A + Earth leakage |
| R3L1A7. | OPTIM 3 P&P-17,5-230; | 17,5 kvar | 2 | Standard | Standard | Standard |
| R3J1150010000 | OPTIM 3-17,5-440; | 17,5 kvar | 1 | Autotransf. maniobra | Standard | Standard |
| R3L1200005K00 | OPTIM 3 P&P-17,5-440; | 17,5 kvar | 1 | Standard | computer SMART III 6 | Automatic switch 63 A + Earth leakage |
| R3Q7E1EN00000 | OPTIM 2-17,5-440; | 17,5 kvar | 1 | Standard | Standard | Standard |
| R3Q6E1EN00000 | OPTIM 1A-18,2-440; | 18,2 kvar | 2 | Standard | Standard | Standard |
| R3Q7F1EN00000 | OPTIM 2-20-440; | 20 kvar | 3 | Standard | Standard | Standard |
| R3L119ZG00000 | OPTIM 3 P&P-21-440; | 21 kvar | 3 | Standard | Standard | Standard |
| R3Q7G1EN00000 | OPTIM 2-22,5-440; | 22,5 kvar | 2 | Standard | Standard | Standard |
| R3L130. | OPTIM 3 P&P-25-440; | 25 kvar | 23 | Standard | Standard | Standard |
| R3L1300000K00 | OPTIM 3 P&P-25-440; | 25 kvar | 8 | Standard | Standard | Automatic switch 63 A + Earth leakage |
| R3Q6F1EN00000 | OPTIM 1A-25-440; | 25 kvar | 8 | Standard | Standard | Standard |
| R3Q7H1EN00000 | OPTIM 2-25-440; | 25 kvar | 4 | Standard | Standard | Standard |
| R5R455. | Optim FRS-25-440; | 25 kvar | 2 | Standard | Standard | Standard |
| R34604000EKXX | STD4-25-440; | 25 kvar | 1 | Standard | computer Plus 8T-CDI | Automatic switch 63 A + Earth leakage |
| R3L1300005K00 | OPTIM 3 P&P-25-440; | 25 kvar | 1 | Standard | computer SMART III 6 | Automatic switch 63 A + Earth leakage |
| R3L1A5. | OPTIM 3 P&P-25-230; | 25 kvar | 1 | Standard | Standard | Standard |
| R3L132ZG00000 | OPTIM 3 P&P-26,25-440; | 26,25 kvar | 4 | Standard | Standard | Standard |
| R3Q6D1EN00000 | OPTIM 1A-30-440; | 30 kvar | 5 | Standard | Standard | Standard |
| R36637EN000K00 | STD3-31,25-440; | 31,25 kvar | 61 | Standard | Standard | Automatic switch 63 A + Earth leakage |
| R3L140. | OPTIM 3 P&P-31,25-440; | 31,25 kvar | 14 | Standard | Standard | Standard |

| Code | Description | kvar | Stock | Suplement 1 | Suplement 2 | Suplement 3 |
|---------------|------------------------|------------|-------|-------------|-----------------------|--|
| R3L1400000K00 | OPTIM 3 P&P-31,25-440; | 31,25 kvar | 6 | Standard | Standard | Automatic switch 63 A + Earth leakage |
| R3L1400005K00 | OPTIM 3 P&P-31,25-440; | 31,25 kvar | 3 | Standard | computer SMART III 6 | Automatic switch 63 A + Earth leakage |
| R3L1400020K00 | OPTIM 3 P&P-31,25-440; | 31,25 kvar | 1 | Fan | Standard | Automatic switch 63 A + Earth leakage |
| R3J130EN00K00 | OPTIM 3-31,25-440; | 31,25 kvar | 1 | Standard | Standard | Automatic switch 63 A + Earth leakage |
| R3L150. | OPTIM 3 P&P-37,5-440; | 37,5 kvar | 11 | Standard | Standard | Standard |
| R3L1500000K00 | OPTIM 3 P&P-37,5-440; | 37,5 kvar | 4 | Standard | Standard | Automatic switch 63 A + Earth leakage |
| R3L1500000X00 | OPTIM 3 P&P-37,5-440; | 37,5 kvar | 2 | Standard | Standard | Automatic switch 80 A + Earth leakage |
| R3H146EN00M00 | STD4-37,5-230; | 37,5 kvar | 1 | Standard | Standard | Automatic switch 160 A + Earth leakage |
| R55370. | FRF-37,5-440; | 37,5 kvar | 1 | Standard | Standard | Standard |
| R5X370. | OPTIM FRF-37,5-440; | 37,5 kvar | 1 | Standard | Standard | Standard |
| R3J1350020K00 | OPTIM 3A-37,5-440; | 37,5 kvar | 1 | Fan | Standard | Automatic switch 63 A + Earth leakage |
| R3L160. | OPTIM 3 P&P-43,75-440; | 43,75 kvar | 16 | Standard | Standard | Standard |
| R34610EN00L00 | STD4-43,75-440; | 43,75 kvar | 9 | Standard | Standard | Automatic switch 125 A + Earth leakage |
| R3L1600000L00 | OPTIM 3 P&P-43,75-440; | 43,75 kvar | 4 | Standard | Standard | Automatic switch 125 A + Earth leakage |
| R3L160000S000 | OPTIM 3 P&P-43,75-440; | 43,75 kvar | 1 | Standard | computer SMART III 6 | Standard |
| R3J140. | OPTIM 3A-43,75-440; | 43,75 kvar | 1 | Standard | Standard | Standard |
| R346150000300 | STD4-50-440; | 50 kvar | 1 | Standard | Standard | Manual switch 200 A |
| R34615EN00L00 | STD4-50-440; | 50 kvar | 1 | Standard | Standard | Automatic switch 125 A + Earth leakage |
| R3J1450020L00 | OPTIM 3A-50-440; | 50 kvar | 1 | Fan | Standard | Automatic switch 125 A + Earth leakage |
| R3J8990000300 | OPTIM 6-50-230; | 50 kvar | 1 | Standard | Standard | Manual switch 200 A |
| R3L170. | OPTIM 3 P&P-52,5-440; | 52,5 kvar | 15 | Standard | Standard | Standard |
| R3L1700000L00 | OPTIM 3 P&P-52,5-440; | 52,5 kvar | 2 | Standard | Standard | Automatic switch 125 A + Earth leakage |
| R3L210. | OPTIM 5 P&P-55-440; | 55 kvar | 8 | Standard | Standard | Standard |
| R34620000P000 | STD4-55-440; | 55 kvar | 4 | Standard | computer PLUS+EDS | Standard |
| R3L2100000L00 | OPTIM 5 P&P-55-440; | 55 kvar | 2 | Standard | Standard | Automatic switch 125 A + Earth leakage |
| R3J205. | OPTIM 4-55-440; | 55 kvar | 2 | Standard | Standard | Standard |
| R3J205000S000 | OPTIM 4-55-440; | 55 kvar | 1 | Standard | computer SMART III 6 | Standard |
| R34623EN00L00 | STD4-60-440; | 60 kvar | 1 | Standard | Standard | Automatic switch 125 A + Earth leakage |
| R3H217EN00N00 | STD6-60-230; | 60 kvar | 1 | Standard | Standard | Automatic switch 250 A + Earth leakage |
| R3L180. | OPTIM 3 P&P-62,5-440; | 62,5 kvar | 9 | Standard | Standard | Standard |
| R3J150. | OPTIM 3A-62,5-440; | 62,5 kvar | 4 | Standard | Standard | Standard |
| R3L1800000L00 | OPTIM 3 P&P-62,5-440; | 62,5 kvar | 2 | Standard | Standard | Automatic switch 125 A + Earth leakage |
| R3L220. | OPTIM 5 P&P-70-440; | 70 kvar | 4 | Standard | Standard | Standard |
| R3L2200000300 | OPTIM 5 P&P-70-440; | 70 kvar | 1 | Standard | Standard | Manual switch 200 A |
| R553A0. | FRF-75-440; | 75 kvar | 2 | Standard | Standard | Standard |
| R3J220000T300 | OPTIM 4-75-440; | 75 kvar | 1 | Standard | computer SMART III 12 | Manual switch 200 A |
| R34635000P000 | STD4-80-440; | 80 kvar | 1 | Standard | computer PLUS+EDS | Standard |

| Code | Description | kvar | Stock | Suplement 1 | Suplement 2 | Suplement 3 |
|---------------|----------------------|-----------|-------|----------------------|-----------------------|--|
| R34635EN00M00 | STD4-80-440; | 80 kvar | 1 | Standard | Standard | Automatic switch 160 A + Earth leakage |
| R6E416. | FRE4-87,5-440; | 87,5 kvar | 1 | Standard | Standard | Standard |
| R3L230. | OPTIM 5 P&P-90-440; | 90 kvar | 7 | Standard | Standard | Standard |
| R3L2300000300 | OPTIM 5 P&P-90-440; | 90 kvar | 4 | Standard | Standard | Manual switch 200 A |
| R3L2300000N00 | OPTIM 5 P&P-90-440; | 90 kvar | 2 | Standard | Standard | Automatic switch 250 A + Earth leakage |
| R3L2300010000 | OPTIM 5 P&P-90-440; | 90 kvar | 1 | Autotransf. maniobra | Standard | Standard |
| R34637. | STD4-100-440; | 100 kvar | 4 | Standard | Standard | Standard |
| R346370000N00 | STD4-100-440; | 100 kvar | 2 | Standard | Standard | Automatic switch 250 A + Earth leakage |
| R5S420000N00 | OPTIM FR4-100-440; | 100 kvar | 1 | Standard | #N/A | Standard |
| R6E4200001000 | FRE4-100-440; | 100 kvar | 1 | Standard | Computer 8d | Standard |
| R3L240. | OPTIM 5 P&P-105-440; | 105 kvar | 7 | Standard | Standard | Standard |
| R3L2400000300 | OPTIM 5 P&P-105-440; | 105 kvar | 4 | Standard | Standard | Manual switch 200 A |
| R34639EN00M00 | STD4-105-440; | 105 kvar | 1 | Standard | Standard | Automatic switch 160 A + Earth leakage |
| R3L2400000M00 | OPTIM 5 P&P-105-440; | 105 kvar | 1 | Standard | Standard | Automatic switch 160 A + Earth leakage |
| R3L2400000N00 | OPTIM 5 P&P-105-440; | 105 kvar | 1 | Standard | Standard | Automatic switch 250 A + Earth leakage |
| R6E422EN00N00 | FRE4-125-440; | 125 kvar | 1 | Standard | Standard | Automatic switch 250 A + Earth leakage |
| R3L250. | OPTIM 5 P&P-135-440; | 135 kvar | 6 | Standard | Standard | Standard |
| R3L2500000N00 | OPTIM 5 P&P-135-440; | 135 kvar | 2 | Standard | Standard | Automatic switch 250 A + Earth leakage |
| R3L2500000D00 | OPTIM 5 P&P-135-440; | 135 kvar | 1 | Standard | Standard | Automatic switch 250A |
| R3L260. | OPTIM 5 P&P-150-440; | 150 kvar | 3 | Standard | Standard | Standard |
| R3L2600000N00 | OPTIM 5 P&P-150-440; | 150 kvar | 2 | Standard | Standard | Automatic switch 250 A + Earth leakage |
| R3J3300020000 | OPTIM 6-150-440; | 150 kvar | 1 | Fan | Standard | Automatic switch 400 A + Earth leakage |
| R3L310. | OPTIM 9 P&P-165-440; | 165 kvar | 1 | Standard | Standard | Standard |
| R3L320. | OPTIM 9 P&P-195-440; | 195 kvar | 2 | Standard | Standard | Standard |
| R3J520. | OPTIM 12-195-440; | 195 kvar | 1 | Standard | Standard | Standard |
| R3L330. | OPTIM 9 P&P-225-440; | 225 kvar | 1 | Standard | Standard | Standard |
| R3J545001T000 | OPTIM 12-240-440; | 240 kvar | 5 | Autotransf. maniobra | computer SMART III 12 | Standard |
| R3L420. | OPTIM 8 P&P-330-440; | 330 kvar | 1 | Standard | Standard | Standard |
| R3L430. | Optim 8 P&P-390-440; | 390 kvar | 2 | Standard | Standard | Standard |
| R3L440. | OPTIM 8 P&P-450-440; | 450 kvar | 2 | Standard | Standard | Standard |
| R3I6260090000 | STD SC8-506-400; | 506 kvar | 2 | 60 Hz | Standard | Standard |
| R544206400000 | FR12-720-400; | 720 kvar | 1 | Standard | Standard | Standard |