

## TQ-6 150 /5A

TQ-6 150 / 5A, Split core current transformer

#### Code: M74025. DESCATALOGADO

- > Flat strip(mm): 20 x 30
- > System: Single-phase
- > Class 3 Power (VA): 1
- > Measurement Range (A): 150/5
- > Input current: 150 A
- > Transformer type: Split core

#### Description

The **TQ** transformer range has been designed to facilitate installation thanks to its split core, which allows it to be installed without having to shut off the power, in both cable and busbar installations. Main features:

- $\circ~$  Types from 100 to 5000 A in the primary
- Secondary encoding types.../5 A,.../1 A,.../250 mA
- $\circ~$  Busbar dimension from 20 x 30 mm to 160 x 80 mm
- Certified transformers
- Accessory for DIN-rail mounting (not available for TQ-12)

### Application

Ideal for installations where the electricity cannot be shut off when installing the transformers.

# Circutor



TQ-6 150 /5A

Code: M74025.

## Specifications

Electrical characteristics	
Safety factor (SF)	10
Power	1 VA(Class 3)
Insulation voltage between terminals S1-S2	3 kV
Mechanical characteristics	
Size (mm) width x height x depth	80 x 98.5 x 28 (mm)
Envelope	Plastic VO self-extinguishing
Fastening	Mural or DIN rail by accessory
Weight (kg)	0,24
Environmental characteristics	
Thermal Class	class B (+130 °C)
Protection class	IP 20
Relative humidity (without condensation)	15 85%
Storage temperature	-40 +85 °C
Working temperature	-5 +40 °C
Specific technical characteristics of current sensors	
Operating voltage	0,72 kV~ máx.
Current measurement circuit	
Nominal frequency	50 / 60 Hz
Primary current measurement	150 A
Dynamic current (Idyn)	2,5 lth
Thermal short-circuit current (Ith)	60 In
Transformation ratio	/ 5 A
Standards	
Standards Electrical safety, Maximum height (m)	1000

For other configurations see table of additional features







# TQ-6 150 /5A

Code: M74025.

Dimensions

Connections

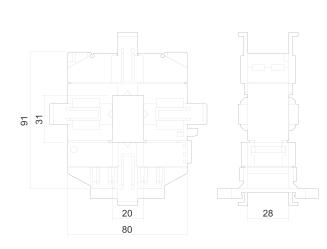

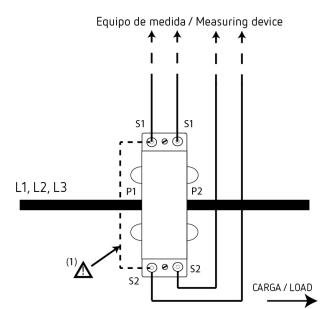

(1) Una vez cableado el secundario del transformador (S1 y S2) al equipo de medida, eliminar el puente realizado entre los secundarios de tensión / Once the secondary of the transformer (S1 and S2) is wired to the measuring device, disconnect the jumper installed between the secondary current.

Circutor