



## OPTIM FR4 P&P-75-240-60Hz

OPTIM FR4 P&P-75-240-60Hz, Detuned capacitor bank 60 Hz

Code: R54SF4.

- > Frequency (Hz): 60 Hz
- > kvar (240 V): 75
- > Aut.Switch (A): 3 x 250
- > Composition: 3x25
- > Mounting: Floor-mounted
- > P%: 7

### Description

The **OPTIM FR P&P** Series capacitor banks with detuned filters have been designed for power compensation purposes in networks with fluctuating load levels, a high content of harmonics and where there is a risk of resonance. Power variations are relatively slow (in seconds) so that the switching operations are carried out with contactors.

### Application

Its application is mainly focused on the compensation of installations with different loads, which require a regulated compensation, as a result of the power factor variations and where there is a high content of harmonics in the network.

- Fixed detuned filters. For the compensation of transformers and motors (**OPTIM FRF / FRM**)
- Automatic detuned filters, For the monitoring of variable loads (**OPTIM FR P&P**).



## OPTIM FR4 P&P-75-240-60Hz

Automatic capacitor banks with detuned filters

Code: R54SF4.

### Specifications

#### AC power supply

Frequency	60 Hz
-----------	-------

#### Electrical characteristics

Losses (W)	< 0,5 W/kvar
Discharge resistance	75 V / 3 min
Surge	10 % 8 h over 24 h 15 % up to 15 min over 24 hours 20 % up to 5 min over 24 hours 30 % up to 1 min over 24 hours
Manoeuvre voltage	Contactors: 230 V
Tolerance C	-5% / 10 %

#### Mechanical characteristics

Size (mm) width x height x depth	900 x 1900 x 650 (mm)
Envelope	Sheet metal RAL 7035 Grey / RAL 3005 Garnet
Fastening	Vertical / Self-supporting
Ventilation	Natural or forced according to options
Weight (kg)	255

#### Environmental characteristics

Protection class	IP 21
Relative humidity (without condensation)	80%
Working temperature	T <sup>a</sup> class D: Daily average: 45 °C, annual average: 35 °C, maximum: 55 °C, minimum: -50 °C

#### Current measurement circuit

Permanent overload	1,3 In
Transformation ratio	In / 5A

#### Protection

Element	Individual protection of each step with fuses with high rupture power (HRP). NH-00 Series.
---------	--

#### OPTIM FR P&P 60Hz

Automatic capacitor banks with detuned filters (contactors switching), type P=7% (fres=227 Hz), 60 Hz.

CODE	TYPE	kvar (240 V)	Aut.Switch (A)	Composition	kvar (480 V)
<b>OPTIM FRS P&amp;P, automatic capacitor banks with computer SMART III regulator. Steps protections by Circuit Breaker</b>					
R54RBN.	OPTIM FRS P&P-25-240-60Hz	25	3 x 100	2x5+10	
R54RBP.	OPTIM FRS P&P-30-240-60Hz	30	3 x 125	3x10	



## OPTIM FR4 P&P-75-240-60Hz

Automatic capacitor banks with detuned filters

Code: R54SF4.

CODE	TYPE	kvar (240 V)	Aut.Switch (A)	Composition	kvar (480 V)
R54RBS.	OPTIM FRS P&P-40-240-60Hz	40	3 x 160	4x10	
<b>OPTIM FR4 P&amp;P, automatic capacitor banks with computer SMART III regulator. Steps protection by blade fuse type NH-00.</b>					
R54SF0.	OPTIM FR4 P&P-37,5-240-60Hz	37,5	3 x 125	3x12,5	
R54SF2.	OPTIM FR4 P&P-50-240-60Hz	50	3 x 200	2x12,5+25	
R54SF3.	OPTIM FR4 P&P-62,5-240-60Hz	62,5	3 x 250	12,5+2x25	
R54SF4.	OPTIM FR4 P&P-75-240-60Hz	75	3 x 250	3x25	
R54SF5.	OPTIM FR4 P&P-87,5-240-60Hz	87,5	3 x 400	12,5+3x25	
R54SF6.	OPTIM FR4 P&P-100-240-60Hz	100	3 x 400	4x25	
R54SF8.	OPTIM FR4 P&P-140-240-60Hz	140	3 x 400	20+3x40	
R54SF9.	OPTIM FR4 P&P-160-240-60Hz	160	3 x 630	4x40	
<b>OPTIM FR6 P&amp;P, automatic capacitor banks with computer SMART III regulator. Steps protection by blade fuse type NH-00.</b>					
R54SG3.	OPTIM FR6 P&P-180-240-60Hz	180	3 x 630	20+4x40	
R54SG4.	OPTIM FR6 P&P-200-240-60Hz	200	3 x 630	5x40	
R54SG6.	OPTIM FR6 P&P-220-240-60Hz	220	3 x 800	20+5x40	
R54SG7.	OPTIM FR6 P&P-240-240-60Hz	240	3 x 800	6x40	
<b>OPTIM FR8 P&amp;P, automatic capacitor banks with computer SMART III regulator. Steps protection by blade fuse type NH-00.</b>					
R54SH1.	OPTIM FR8 P&P-280-240-60Hz	280	3 x 1000	7x40	
R54SH2.	OPTIM FR8 P&P-320-240-60Hz	320	3 x 1000	8x40	
<b>OPTIM FR10 P&amp;P, automatic capacitor banks with computer SMART III regulator. Steps protection by blade fuse type NH-00.</b>					
R54SJ4.	OPTIM FR10 P&P-360-240-60Hz	360	3 x 1250	9x40	
R54SJ6.	OPTIM FR10 P&P-400-240-60Hz	400	3 x 1250	10x40	
<b>OPTIM FR12 P&amp;P, automatic capacitor banks with computer SMART III regulator. Steps protection by blade fuse type NH-00.</b>					
R54SK4.	OPTIM FR12 P&P-440-240-60Hz	440	3 x 1600	11x40	
R54SK6.	OPTIM FR12 P&P-480-240-60Hz	480	3 x 1600	12x40	
<b>OPTIM FRS P&amp;P, automatic capacitor banks with computer SMART III regulator. General protection by Circuit Breaker</b>					
R54RB2.	OPTIM FRS P&P-50-480-60Hz		3 x 100	2x12,5+25	50
R54RB4.	OPTIM FRS P&P-75-480-60Hz		3 x 125	3x25	75
R54RB9.	OPTIM FRS P&P-100-480-60Hz		3 x 160	4x25	100
<b>OPTIM FR4 P&amp;P, automatic capacitor banks with computer SMART III regulator. Steps protection by blade fuse type NH-00.</b>					
R54SB4.	OPTIM FR4 P&P-75-480-60Hz		3 x 125	3x25	75
R54SB6.	OPTIM FR4 P&P-100-480-60Hz		3 x 200	2x25+50	100
R54SB7.	OPTIM FR4 P&P-125-480-60Hz		3 x 250	25+2x50	125
R54SB3.	OPTIM FR4 P&P-150-480-60Hz		3 x 250	2x25+2x50	150
R54SB0.	OPTIM FR4 P&P-175-480-60Hz		3 x 400	25+3x50	175
R54SB9.	OPTIM FR4 P&P-200-480-60Hz		3 x 400	4x50	200
R54SB8.	OPTIM FR4 P&P-262,5-480-60Hz		3 x 400	37,5+3x75	262,5
R54SB5.	OPTIM FR4 P&P-300-480-60Hz		3 x 630	4x75	300
<b>OPTIM FR6 P&amp;P, automatic capacitor banks with computer SMART III regulator. Steps protection by blade fuse type NH-00.</b>					
R54TB3.	OPTIM FR6 P&P-337,5-480-60Hz		3 x 630	37,5+4x75	337,5



## OPTIM FR4 P&P-75-240-60Hz

Automatic capacitor banks with detuned filters

Code: R54SF4.

CODE	TYPE	kvar (240 V)	Aut.Switch (A)	Composition	kvar (480 V)
R54TB4.	OPTIM FR6 P&P-375-480-60Hz		3 x 630	5x75	375
R54TB6.	OPTIM FR6 P&P-412,5-480-60Hz		3 x 800	37,5+5x75	412,5
R54TB7.	OPTIM FR6 P&P-450-480-60Hz		3 x 800	6x75	450
<b>OPTIM FR8 P&amp;P, automatic capacitor banks with computer SMART III regulator. Steps protection by blade fuse type NH-00.</b>					
R54UC0.	OPTIM FR8 P&P-487,5-480-60Hz		3 x 800	37,5+6x75	487,5
R54UC1.	OPTIM FR8 P&P-525-480-60Hz		3 x 1000	7x75	525
R54UC2.	OPTIM FR8 P&P-600-480-60Hz		3 x 1000	8x75	600
<b>OPTIM FR10 P&amp;P, automatic capacitor banks with computer SMART III regulator. Steps protection by blade fuse type NH-00.</b>					
R54VB4.	OPTIM FR10 P&P-675-480-60Hz		3 x 1250	9x75	675
R54VB6.	OPTIM FR10 P&P-750-480-60Hz		3 x 1250	10x75	750
<b>OPTIM FR12 P&amp;P, automatic capacitor banks with computer SMART III regulator. Steps protection by blade fuse type NH-00.</b>					
R54WD1.	OPTIM FR12 P&P-825-480-60Hz		3 x 1600	11x75	825
R54WD2.	OPTIM FR12 P&P-900-480-60Hz		3 x 1600	12x75	900