

Code:

### Description

The capacitor banks with detuned filters of the **OPTIM FRE** series have been designed for reactive energy correction in networks with fluctuating load levels, high harmonic presence and a risk of resonance.

The power variations are relatively quick (measured in milliseconds), and the operation is thus carried out by thyristors, which are connected to a voltage controller board, so that the connection and disconnection of the capacitor is carried out with zero voltage difference. Transients are prevented between the connection and disconnection of the steps, obtaining an immediate response to the load fluctuations.

### **Application**

The most common application is with individual loads or in installations where a quick compensation response is needed (e.g. welding units, motors for lifting units, lifts, etc.) and where the network has high harmonic content.







Code:

## **Specifications**

Losses (W)	< 0,5 W/kvar			
Discharge resistance	75 V / 3 min			
Surge	10 % 8 h over 24 h 15 % up to 15 min over 24 hours 20 % up to 5 min over 24 hours 30 % up to 1 min over 24 hours			
Reinforcement voltage	440 V			
Tolerance C	-5% / 10 %			
Voltage	400 V (50 Hz) (other voltages on request)			
Mechanical characteristics				
Size (mm) width x height x depth	1500 x 1900 x 650 (mm)			
Envelope	Sheet metal RAL 7035 Grey / RAL 3005 Garnet			
Fastening	Vertical / Self-supporting			
Ventilation	Natural or forced according to options			
Weight (kg)	540			
Environmental characteristics				
Protection class	IP 21			
Relative humidity (without condensation)	80%			
Working temperature	T° class D: Daily average: 45 °C, annual average: 35 °C, maximum: 55 °C, minimum -50 °C			
Current measurement circuit				
Permanent overload	1,3 ln			
Transformation ratio	In / 5A			
Standards				
Electrical safety, Maximum height (m)	2000 m			
Standards	UNE-EN 61921, UNE-EN 61439-1, UNE EN 60831			
Features / performance				
Components	CLZ capacitor Static switching unit on each stage, made up of static contactors (thyristors) Two-pole circuit breaker protection for capacitor bank and regulator operations. Reactive energy regulator of the Computer MAX-f Built-in thermostat on the heatsink for disconnecting the stage in the case of excessive temperatures (90 °C) Detuned filters tuned to 189 Hz for protection against harmonics present if the network and for preventing resonance with harmonics of the 5th order or higher.			
Optional	Manual switch on capacitor bank header Circuit breaker on capacitor bank header Circuit breaker + earth leakage protection on capacitor bank header Forced ventilation unit + thermostat Polycarbonate sheet for protection against direct contacts 400/230 V autotransformer			







Code:

#### Protection

Element Protection by stage by fuses with high cut-off power (APR). NH-00 series.


#### OPTIM FRE

Automatic capacitor banks with rejection filters (static contactor), 50 Hz.

REAGRIBB         OPTIM FRES-90-440         74         90         4         70           REAG           REAGE         WITTER         TS         150         3         95           REAGEZA         OPTIM FREA-150-440         145         175         3         120           REAGEZA         OPTIM FREA-250-440         165         200         3         150           REAGEZA         OPTIM FREA-250-440         207         250         3         185           REAGEZA         OPTIM FREA-350-440         289         350         4         240           REAGEZA         OPTIM FREA-300-440         289         350         4         2x150           REAGEZA         OPTIM FREA-400-440         331         400         5         2x185           REAGLAS         OPTIM FREA-400-440         372         450         5         2x185           REAGLAS         OPTIM FREA-50-440         413         500         5         2x240           REAGLAS         OPTIM FREE-600-440         496         600         6         2x240           REAGLAS         OPTIM FREE-650-440         537         650         7         3x150           REAGLAS         OPTIM FREE-700-440 <th>CODE</th> <th>TYPE</th> <th>kvar (400 V)</th> <th>kvar (440 V)</th> <th>Nr steps</th> <th>Cable section (mm2)</th>	CODE	TYPE	kvar (400 V)	kvar (440 V)	Nr steps	Cable section (mm2)
REFECT   150   150   3   95   150   150   3   95   150	FRES					
R6424.         OPTIM FRE4-150-440         125         150         3         95           R6425.         OPTIM FRE4-175-440         145         175         3         120           R6428.         OPTIM FRE4-200-440         165         200         3         150           R6428.         OPTIM FRE4-250-440         207         250         3         185           R6430.         OPTIM FRE4-350-440         289         350         4         240           R64632.         OPTIM FRE4-30-440         331         400         4         2x185           R64634.         OPTIM FRE6-400-440         331         400         5         2x185           R6435.         OPTIM FRE6-400-440         372         450         5         2x185           R6435.         OPTIM FRE6-500-440         413         500         5         2x240           R6435.         OPTIM FRE6-500-440         413         500         5         2x240           R6436.         OPTIM FRE6-500-440         496         600         7         2x240           R6436.         OPTIM FRE6-600-440         496         600         7         2x240           R64436.         OPTIM FRE6-500-440         537	R64R88.	OPTIM FRES-90-440	74	90	4	70
R6425.         OPTIM FRE4-175-440         145         175         3         120           R6428.         OPTIM FRE4-200-440         165         200         3         150           R6429.         OPTIM FRE4-300-440         207         250         3         185           R6430.         OPTIM FRE4-300-440         248         300         4         240           R6432.         OPTIM FRE4-400-440         331         400         4         2x150           R6434.         OPTIM FRE4-400-440         331         400         4         2x185           R6430.         OPTIM FRE6-400-440         331         400         5         2x185           R6431.         OPTIM FRE6-400-440         372         450         5         2x185           R6431.         OPTIM FRE6-50-440         413         500         5         2x240           R6440.         OPTIM FRE6-50-440         455         550         6         2x240           R6458.         OPTIM FRE6-600-440         496         600         7         2x240           R6648.         OPTIM FRE8-600-440         579         700         7         3x150           R6648.         OPTIM FRE8-700-440         579	FRE4					
R6428.         OPTIM FRE4-200-440         165         200         3         150           R6429.         OPTIM FRE4-250-440         207         250         3         185           R6429.         OPTIM FRE4-300-440         248         300         4         240           R6434.         OPTIM FRE4-350-440         381         400         4         2x185           R6434.         OPTIM FRE4-400-440         31         400         4         2x185           R6435.         OPTIM FRE6-400-440         31         400         5         2x185           R6435.         OPTIM FRE6-450-440         372         450         5         2x185           R6436.         OPTIM FRE6-50-440         413         500         5         2x240           R6436.         OPTIM FRE6-500-440         496         600         6         2x240           R6436.         OPTIM FRE6-600-440         496         600         7         2x240           R66436.         OPTIM FRE8-600-440         537         650         7         3x150           R66436.         OPTIM FRE8-750-440         579         700         7         3x150           R66436.         OPTIM FRE8-750-440         620	R64E24.	OPTIM FRE4-150-440	125	150	3	95
R64229.         OPTIM FRE4-250-440         207         250         3         185           R64200.         OPTIM FRE4-300-440         248         300         4         240           R64232.         OPTIM FRE4-350-440         289         350         4         2x150           R64234.         OPTIM FRE4-400-440         331         400         4         2x185           R7665.         USTIM FRE6-400-440         331         400         5         2x185           R64325.         OPTIM FRE6-400-440         372         450         5         2x185           R64320.         OPTIM FRE6-450-440         413         500         5         2x240           R64325.         OPTIM FRE6-500-440         413         500         5         2x240           R64326.         OPTIM FRE6-600-440         455         550         6         2x240           R64327.         OPTIM FRE6-600-440         496         600         7         2x240           R64328.         OPTIM FRE8-600-440         537         650         7         3x150           R64438.         OPTIM FRE8-600-440         579         700         7         3x150           R64438.         OPTIM FRE8-750-440 <td< td=""><td>R64E25.</td><td>OPTIM FRE4-175-440</td><td>145</td><td>175</td><td>3</td><td>120</td></td<>	R64E25.	OPTIM FRE4-175-440	145	175	3	120
R64E30.         OPTIM FRE4-300-440         248         300         4         240           R64E32.         OPTIM FRE4-350-440         289         350         4         2x150           R64E34.         OPTIM FRE4-400-440         331         400         4         2x185           RFE6         R86J25.         OPTIM FRE6-400-440         331         400         5         2x185           R64J30.         OPTIM FRE6-450-440         372         450         5         2x185           R64J35.         OPTIM FRE6-500-440         413         500         5         2x240           R64J40.         OPTIM FRE6-500-440         496         600         6         2x240           R64J40.         OPTIM FRE6-600-440         496         600         7         2x240           R64S36.         OPTIM FRE8-600-440         496         600         7         2x240           R66K436.         OPTIM FRE8-600-440         537         650         7         3x150           R66K436.         OPTIM FRE8-750-440         579         700         7         3x150           R66K420.         OPTIM FRE8-800-440         661         800         8         3x185           R66K442.	R64E28.	OPTIM FRE4-200-440	165	200	3	150
264632.         OPTIM FRE4-350-440         289         350         4         2x150           264634.         OPTIM FRE4-400-440         331         400         4         2x185           26425.         OPTIM FRE6-400-440         331         400         5         2x185           26430.         OPTIM FRE6-50-440         372         450         5         2x185           266433.         OPTIM FRE6-500-440         413         500         5         2x240           266435.         OPTIM FRE6-500-440         455         550         6         2x240           266440.         OPTIM FRE6-600-440         496         600         6         2x240           266438.         OPTIM FRE8-600-440         496         600         7         2x240           266438.         OPTIM FRE8-600-440         537         650         7         3x150           2664430.         OPTIM FRE8-600-440         579         700         7         3x150           2664430.         OPTIM FRE8-600-440         60         750         8         3x185           2664440.         OPTIM FRE8-800-440         61         80         8         2x240 / 240           266444.         OPTIM FRE10-800-440	R64E29.	OPTIM FRE4-250-440	207	250	3	185
1864834. ОРТІМ FRE4-400-440 331 400 4 2x185  1864325. ОРТІМ FRE6-400-440 331 400 5 2x185  1864330. ОРТІМ FRE6-450-440 372 450 5 2x185  1864335. ОРТІМ FRE6-500-440 413 500 5 2x240  1864340. ОРТІМ FRE6-550-440 455 550 6 2x240  1864345. ОРТІМ FRE6-600-440 496 600 6 2x240  186436. ОРТІМ FRE8-600-440 496 600 7 2x240  186436. ОРТІМ FRE8-600-440 537 650 7 3x150  1864843. ОРТІМ FRE8-650-440 579 700 7 3x150  1864844. ОРТІМ FRE8-750-440 620 750 8 3x185  1864844. ОРТІМ FRE8-800-440 661 800 8 3x185  1864844. ОРТІМ FRE8-800-440 661 800 8 2x240 / 240  186425. ОРТІМ FRE8-800-440 702 850 9 2x240 / 240  186425. ОРТІМ FRE8-800-440 702 850 9 2x240 / 240  1864235. ОРТІМ FRE10-800-440 744 900 9 2x240 / 240  1864236. ОРТІМ FRE10-900-440 744 900 9 2x240 / 240  1864236. ОРТІМ FRE10-900-440 765 950 10 2x240 / 240  1864236. ОРТІМ FRE10-900-440 826 1000 10 2x240 / 24185  1864450. ОРТІМ FRE10-900-440 826 1000 10 2x240 / 2x185  1864450. ОРТІМ FRE10-1000-440 868 1050 11 2x240 / 2x	R64E30.	OPTIM FRE4-300-440	248	300	4	240
RE64 R64J25. OPTIM FRE6-400-440 331 400 5 2x185 R64J30. OPTIM FRE6-450-440 372 450 5 2x185 R64J30. OPTIM FRE6-500-440 413 500 5 2x240 R64J35. OPTIM FRE6-550-440 455 550 6 2x240 R64J40. OPTIM FRE6-550-440 455 550 6 2x240 R64J45. OPTIM FRE6-600-440 496 600 6 2x240 R64J45. OPTIM FRE8-600-440 496 600 7 2x240 R64J45. OPTIM FRE8-600-440 537 650 7 3x150 R64K38. OPTIM FRE8-650-440 579 700 7 3x150 R64K40. OPTIM FRE8-700-440 620 750 8 3x185 R64K41. OPTIM FRE8-800-440 661 800 8 3x185 R64K42. OPTIM FRE8-800-440 661 800 8 2x240 / 240 R64C25. OPTIM FRE8-800-440 702 850 9 2x240 / 240 R64C30. OPTIM FRE10-800-440 702 850 9 2x240 / 240 R64C30. OPTIM FRE10-800-440 702 850 9 2x240 / 240 R64C30. OPTIM FRE10-900-440 744 900 9 2x240 / 240 R64C30. OPTIM FRE10-900-440 785 950 10 2x240 / 240 R64C40. OPTIM FRE10-900-440 826 1000 10 2x240 / 2x185 R66C45. OPTIM FRE10-1000-440 826 1000 10 2x240 / 2x185 R66C45. OPTIM FRE10-1000-440 868 1050 11 2x240 /	R64E32.	OPTIM FRE4-350-440	289	350	4	2x150
864J25.         OPTIM FRE6-400-440         331         400         5         2x185           864J30.         OPTIM FRE6-450-440         372         450         5         2x240           864J35.         OPTIM FRE6-500-440         413         500         5         2x240           864J35.         OPTIM FRE6-550-440         455         550         6         2x240           864J45.         OPTIM FRE6-600-440         496         600         6         2x240           864J46.         OPTIM FRE8-600-440         496         600         7         2x240           864K38.         OPTIM FRE8-650-440         537         650         7         3x150           864K40.         OPTIM FRE8-700-440         579         700         7         3x150           864K42.         OPTIM FRE8-800-440         620         750         8         3x185           864K44.         OPTIM FRE8-800-440         661         800         8         2x240 / 240           864C25.         OPTIM FRE10-800-440         702         850         9         2x240 / 240           864C35.         OPTIM FRE10-900-440         744         900         9         2x240 / 240           864C35.         OPTIM FRE1	R64E34.	OPTIM FRE4-400-440	331	400	4	2x185
864.130.         OPTIM FRE6-450-440         372         450         5         2x185           864.135.         OPTIM FRE6-500-440         413         500         5         2x240           864.145.         OPTIM FRE6-550-440         455         550         6         2x240           864.145.         OPTIM FRE6-600-440         496         600         6         2x240           864.145.         OPTIM FRE8-600-440         496         600         7         2x240           864.838.         OPTIM FRE8-650-440         537         650         7         3x150           864.840.         OPTIM FRE8-750-440         579         700         7         3x150           864.842.         OPTIM FRE8-750-440         620         750         8         3x185           864.444.         OPTIM FRE8-800-440         661         800         8         2x240 / 240           864.25.         OPTIM FRE10-800-440         661         800         8         2x240 / 240           864.235.         OPTIM FRE10-800-440         744         900         9         2x240 / 240           864.245.         OPTIM FRE10-950-440         785         950         10         2x240 / 24185           864.245.	FRE6					
R64J35.         OPTIM FRE6-500-440         413         500         5         2x240           R64J40.         OPTIM FRE6-550-440         455         550         6         2x240           R64J45.         OPTIM FRE6-600-440         496         600         6         2x240           RERB         ***********************************	R64J25.	OPTIM FRE6-400-440	331	400	5	2x185
R64J4O.       OPTIM FRE6-550-440       455       550       6       2x240         R64J45.       OPTIM FRE6-600-440       496       600       6       2x240         R68       SERES	R64J30.	OPTIM FRE6-450-440	372	450	5	2x185
R64J45. OPTIM FRE6-600-440 496 600 6 2x240  R64K36. OPTIM FRE8-600-440 496 600 7 2x240  R64K38. OPTIM FRE8-650-440 537 650 7 3x150  R64K40. OPTIM FRE8-700-440 579 700 7 3x150  R64K42. OPTIM FRE8-750-440 620 750 8 3x185  R64K44. OPTIM FRE8-800-440 661 800 8 3x185  R64C25. OPTIM FRE10-800-440 661 800 8 2x240 / 240  R64C25. OPTIM FRE10-800-440 702 850 9 2x240 / 240  R64C30. OPTIM FRE10-850-440 702 850 9 2x240 / 240  R64C35. OPTIM FRE10-900-440 744 900 9 2x240 / 240  R64C40. OPTIM FRE10-950-440 826 1000 10 2x240 / 2x185  R64C45. OPTIM FRE10-1000-440 826 1000 10 2x240 / 2x185  R64C55. OPTIM FRE10-1000-440 826 1000 10 2x240 / 2x185  R64C55. OPTIM FRE10-1000-440 868 1050 11 2x240 / 2x240  R64C55. OPTIM FRE10-1000-440 909 1100 11 2x240 / 2x240  R64L50. OPTIM FRE12-1150-440 909 1100 11 2x240 / 2x240	R64J35.	OPTIM FRE6-500-440	413	500	5	2x240
REKES R64K36. OPTIM FRE8-600-440 496 600 7 2x240 R64K38. OPTIM FRE8-650-440 537 650 7 3x150 R64K40. OPTIM FRE8-700-440 579 700 7 3x150 R64K42. OPTIM FRE8-750-440 620 750 8 3x185 R64K44. OPTIM FRE8-800-440 661 800 8 3x185 RFE10 R64C25. OPTIM FRE10-800-440 661 800 8 2x240 / 240 R64C30. OPTIM FRE10-850-440 702 850 9 2x240 / 240 R64C35. OPTIM FRE10-900-440 744 900 9 2x240 / 240 R64C430. OPTIM FRE10-900-440 785 950 10 2x240 / 240 R64C40. OPTIM FRE10-950-440 826 1000 10 2x240 / 2x185 R6EC45. OPTIM FRE10-1000-440 826 1000 10 2x240 / 2x185 R64C55. OPTIM FRE10-1000-440 826 1000 10 2x240 / 2x185 R64C55. OPTIM FRE10-1000-440 826 1000 11 2x240 / 2x185 R64C55. OPTIM FRE10-1000-440 909 1100 11 2x240 / 2x240 R64C55. OPTIM FRE12-1150-440 909 1100 11 2x240 / 2x240	R64J40.	OPTIM FRE6-550-440	455	550	6	2x240
R64K36. OPTIM FRE8-600-440 496 600 7 2x240 R64K38. OPTIM FRE8-650-440 537 650 7 3x150 R64K40. OPTIM FRE8-700-440 579 700 7 3x150 R64K42. OPTIM FRE8-750-440 620 750 8 3x185 R64K44. OPTIM FRE8-800-440 661 800 8 3x185 R64K44. OPTIM FRE10-800-440 661 800 8 2x240 / 240 R64C25. OPTIM FRE10-800-440 702 850 9 2x240 / 240 R64C30. OPTIM FRE10-850-440 702 850 9 2x240 / 240 R64C35. OPTIM FRE10-900-440 744 900 9 2x240 / 240 R64C40. OPTIM FRE10-950-440 785 950 10 2x240 / 2x185 R64C45. OPTIM FRE10-1000-440 826 1000 10 2x240 / 2x185 R64C45. OPTIM FRE10-1000-440 868 1050 11 2x240 / 2x240 R64L50. OPTIM FRE12-1150-440 909 1100 11 2x240 / 2x240 R64L50. OPTIM FRE12-1150-440 909 1100 11 2x240 / 2x240	R64J45.	OPTIM FRE6-600-440	496	600	6	2x240
R64K38. OPTIM FRE8-650-440 537 650 7 3x150 R64K40. OPTIM FRE8-700-440 579 700 7 3x150 R64K42. OPTIM FRE8-750-440 620 750 8 3x185 R64K44. OPTIM FRE8-800-440 661 800 8 3x185 R64K44. OPTIM FRE10-800-440 661 800 8 2x240 / 240 R64C25. OPTIM FRE10-800-440 702 850 9 2x240 / 240 R64C30. OPTIM FRE10-850-440 702 850 9 2x240 / 240 R64C35. OPTIM FRE10-900-440 744 900 9 2x240 / 240 R64C40. OPTIM FRE10-950-440 785 950 10 2x240 / 2x185 R64C45. OPTIM FRE10-1000-440 826 1000 10 2x240 / 2x185 R64C45. OPTIM FRE10-1000-440 868 1050 11 2x240 / 2x240 / 2x240 R64L50. OPTIM FRE12-1150-440 909 1100 11 2x240 / 2x240 R64L55. OPTIM FRE12-1150-440 909 1100 11 2x240 / 2x240	FRE8					
R64K40. OPTIM FRE8-700-440 579 700 7 3x150 R64K42. OPTIM FRE8-750-440 620 750 8 3x185 R64K44. OPTIM FRE8-800-440 661 800 8 3x185 R64K44. OPTIM FRE10-800-440 661 800 8 3x185 R64C25. OPTIM FRE10-800-440 661 800 8 2x240 / 240 R64C25. OPTIM FRE10-850-440 702 850 9 2x240 / 240 R64C35. OPTIM FRE10-950-440 744 900 9 2x240 / 240 R64C35. OPTIM FRE10-950-440 785 950 10 2x240 / 2x185 R64C40. OPTIM FRE10-950-440 826 1000 10 2x240 / 2x185 R64C45. OPTIM FRE10-1000-440 868 1050 11 2x240 / 2x240 R64L50. OPTIM FRE12-1100-440 909 1100 11 2x240 / 2x240 R64L50. OPTIM FRE12-1100-440 909 1100 11 2x240 / 2x240 R64L60. OPTIM FRE12-1150-440 950 1150 12 2x240 / 2x240	R64K36.	OPTIM FRE8-600-440	496	600	7	2x240
R64K42. OPTIM FRE8-750-440 620 750 8 3x185 R64K44. OPTIM FRE8-800-440 661 800 8 3x185  R64K44. OPTIM FRE8-800-440 661 800 8 3x185  R64C25. OPTIM FRE10-800-440 661 800 8 2x240 / 240 R64C30. OPTIM FRE10-850-440 702 850 9 2x240 / 240 R64C35. OPTIM FRE10-900-440 744 900 9 2x240 / 240 R64C40. OPTIM FRE10-950-440 785 950 10 2x240 / 2x185 R64C45. OPTIM FRE10-1000-440 826 1000 10 2x240 / 2x185  R64C5. OPTIM FRE10-1000-440 868 1050 11 2x240 / 2x240 R64L50. OPTIM FRE12-1050-440 909 1100 11 2x240 / 2x240 R64L55. OPTIM FRE12-1150-440 909 1100 11 2x240 / 2x240	R64K38.	OPTIM FRE8-650-440	537	650	7	3x150
R64K44. OPTIM FRE8-800-440 661 800 8 3x185  R64C25. OPTIM FRE10-800-440 661 800 8 2x240 / 240  R64C30. OPTIM FRE10-850-440 702 850 9 2x240 / 240  R64C35. OPTIM FRE10-900-440 744 900 9 2x240 / 240  R64C40. OPTIM FRE10-950-440 785 950 10 2x240 / 2x185  R64C45. OPTIM FRE10-1000-440 826 1000 10 2x240 / 2x185  R64C45. OPTIM FRE10-1000-440 868 1050 11 2x240 / 2x240  R64L50. OPTIM FRE12-1150-440 909 1100 11 2x240 / 2x240  R64L60. OPTIM FRE12-1150-440 950 1150 12 2x240 / 2x240	R64K40.	OPTIM FRE8-700-440	579	700	7	3x150
R64C25. OPTIM FRE10-800-440 661 800 8 2x240 / 240 R64C30. OPTIM FRE10-850-440 702 850 9 2x240 / 240 R64C35. OPTIM FRE10-900-440 744 900 9 2x240 / 240 R64C40. OPTIM FRE10-950-440 785 950 10 2x240 / 2x185 R64C45. OPTIM FRE10-1000-440 826 1000 10 2x240 / 2x185 RFRE12 R64L50. OPTIM FRE12-1050-440 868 1050 11 2x240 / 2x240 R64L50. OPTIM FRE12-1100-440 909 1100 11 2x240 / 2x240 R64L60. OPTIM FRE12-1150-440 950 1150 12 2x240 / 2x240	R64K42.	OPTIM FRE8-750-440	620	750	8	3x185
R64C25.       OPTIM FRE10-800-440       661       800       8       2x240 / 240         R64C30.       OPTIM FRE10-850-440       702       850       9       2x240 / 240         R64C35.       OPTIM FRE10-900-440       744       900       9       2x240 / 2x185         R64C40.       OPTIM FRE10-950-440       826       1000       10       2x240 / 2x185         R64C45.       OPTIM FRE10-1000-440       868       1050       11       2x240 / 2x240         R64L50.       OPTIM FRE12-1100-440       909       1100       11       2x240 / 2x240         R64L60.       OPTIM FRE12-1150-440       950       1150       12       2x240 / 2x240	R64K44.	OPTIM FRE8-800-440	661	800	8	3x185
R64C30.       OPTIM FRE10-850-440       702       850       9       2x240 / 240         R64C35.       OPTIM FRE10-900-440       744       900       9       2x240 / 240         R64C40.       OPTIM FRE10-950-440       785       950       10       2x240 / 2x185         R64C45.       OPTIM FRE10-1000-440       826       1000       10       2x240 / 2x185         FRE12         R64L50.       OPTIM FRE12-1050-440       868       1050       11       2x240 / 2x240         R64L55.       OPTIM FRE12-1100-440       909       1100       11       2x240 / 2x240         R64L60.       OPTIM FRE12-1150-440       950       1150       12       2x240 / 2x240	FRE10					
R64C35.       OPTIM FRE10-900-440       744       900       9       2x240 / 240         R64C40.       OPTIM FRE10-950-440       785       950       10       2x240 / 2x185         R64C45.       OPTIM FRE10-1000-440       826       1000       10       2x240 / 2x185         FRE12         R64L50.       OPTIM FRE12-1050-440       868       1050       11       2x240 / 2x240         R64L55.       OPTIM FRE12-1100-440       909       1100       11       2x240 / 2x240         R64L60.       OPTIM FRE12-1150-440       950       1150       12       2x240 / 2x240	R64C25.	OPTIM FRE10-800-440	661	800	8	2x240 / 240
R64C40. OPTIM FRE10-950-440 785 950 10 2x240 / 2x185 R64C45. OPTIM FRE10-1000-440 826 1000 10 2x240 / 2x185 R64L50. OPTIM FRE12-1050-440 868 1050 11 2x240 / 2x240 R64L55. OPTIM FRE12-1100-440 909 1100 11 2x240 / 2x240 R64L60. OPTIM FRE12-1150-440 950 1150 12 2x240 / 2x240	R64C30.	OPTIM FRE10-850-440	702	850	9	2x240 / 240
R64C45.       OPTIM FRE10-1000-440       826       1000       10       2x240 / 2x185         FRE12       R64L50.       OPTIM FRE12-1050-440       868       1050       11       2x240 / 2x240         R64L55.       OPTIM FRE12-1100-440       909       1100       11       2x240 / 2x240         R64L60.       OPTIM FRE12-1150-440       950       1150       12       2x240 / 2x240	R64C35.	OPTIM FRE10-900-440	744	900	9	2x240 / 240
R64L50. OPTIM FRE12-1050-440 868 1050 11 2x240 / 2x240 R64L55. OPTIM FRE12-1100-440 909 1100 11 2x240 / 2x240 R64L60. OPTIM FRE12-1150-440 950 1150 12 2x240 / 2x240	R64C40.	OPTIM FRE10-950-440	785	950	10	2x240 / 2x185
R64L50.       OPTIM FRE12-1050-440       868       1050       11       2x240 / 2x240         R64L55.       OPTIM FRE12-1100-440       909       1100       11       2x240 / 2x240         R64L60.       OPTIM FRE12-1150-440       950       1150       12       2x240 / 2x240	R64C45.	OPTIM FRE10-1000-440	826	1000	10	2x240 / 2x185
R64L55.     OPTIM FRE12-1100-440     909     1100     11     2x240 / 2x240       R64L60.     OPTIM FRE12-1150-440     950     1150     12     2x240 / 2x240	FRE12					
R64L60. OPTIM FRE12-1150-440 950 1150 12 2x240 / 2x240	R64L50.	OPTIM FRE12-1050-440	868	1050	11	2x240 / 2x240
	R64L55.	OPTIM FRE12-1100-440	909	1100	11	2x240 / 2x240
R64L65. OPTIM FRE12-1200-440 992 1200 12 2x240 / 2x240	R64L60.	OPTIM FRE12-1150-440	950	1150	12	2x240 / 2x240
	R64L65.	OPTIM FRE12-1200-440	992	1200	12	2x240 / 2x240





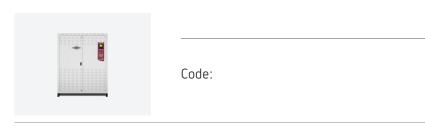

Cable cross-section for installations with Un= 400 V. The installation company must ensure compliance with the low voltage directive at all times, in accordance with the characteristics of each installation and type of cable.







# **Dimensions**

# Connections





