



### TQ-8 1000 /5A

TQ-8 1000 /5A, Split core current transformer

Code: M7403I. DESCATALOGADO

> Flat strip(mm): 60 x 80 > System: Single-phase > Class 0,5 Power (VA): 5 > Class 1 Power (VA): 8 > Class 3 Power (VA): 15

> Measurement Range (A): 1000/5

> Input current: 1000 A > Transformer type: Split core

### Description

The TQ transformer range has been designed to facilitate installation thanks to its split core, which allows it to be installed without having to shut off the power, in both cable and busbar installations. Main features:

- $\circ~$  Types from 100 to 5000 A in the primary
- $\circ~$  Secondary encoding types.../5 A,.../1 A,.../250 mA
- O Busbar dimension from 20 x 30 mm to 160 x 80 mm
- Certified transformers
- Accessory for DIN-rail mounting (not available for TQ-12)

### **Application**

Ideal for installations where the electricity cannot be shut off when installing the transformers.







# TQ-8 1000 /5A

Code: M7403I.

### **Specifications**

Safety factor (SF)	10
Power	5 VA(Class 0.5) , 8 VA(Class 1) , 15 VA(Class 3)
Insulation voltage between terminals S1-S2	3 kV
dechanical characteristics	
Size (mm) width x height x depth	120 x 148.5 x 28 (mm)
Envelope	Plastic V0 self-extinguishing
Fastening	Mural or DIN rail by accessory
Weight (kg)	0,55
nvironmental characteristics	
Thermal Class	class B (+130 °C)
Protection class	IP 20
Relative humidity (without condensation)	15 85%
Storage temperature	-40 +85 °C
Working temperature	-5 +40 °C
pecific technical characteristics of current sensors	
Operating voltage	0,72 kV~ máx.
urrent measurement circuit	
Nominal frequency	50 / 60 Hz
Primary current measurement	1000 A
Dynamic current (Idyn)	2,5 lth
Thermal short-circuit current (Ith)	60 In
Transformation ratio	/ 5 A
itandards	
Electrical safety, Maximum height (m)	1000

For other configurations see table of additional features









## TQ-8 1000 /5A

Code: M7403I.

#### Dimensions

#### Connections

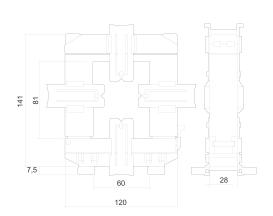

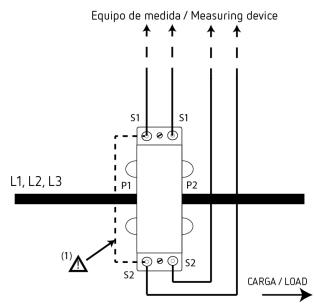

(1) Una vez cableado el secundario del transformador (S1 y S2) al equipo de medida, eliminar el puente realizado entre los secundarios de tensión / Once the secondary of the transformer (S1 and S2) is wired to the measuring device, disconnect the jumper installed between the secondary current.

